

# Little Colorado<sup>®</sup>

Inc.  
Quality Wooden Children's Furniture and Accessories  
Made in America • Established 1987  
www.littlecolorado.com

## **WARNING: ADULT ASSEMBLY REQUIRED**

**WARNING: Assembly kit contains parts with sharp edges.**

**WARNING: Assembly kit contains parts with sharp points.**

**WARNING: Package contains plastic bags that present suffocation risks for children.**


**WARNING: Assembly kit contains small parts that present choking hazards for children.**

### Assembly Instructions for Twin Headboards

#### Item #85 and #89

#### Contents:

- 2- Posts
- 1- Headboard Panel
- 10- 1-5/8" Wood Screws
- 4- 2" Carriage Head Bolts
- 4- Washers
- 4- Wing Nuts.

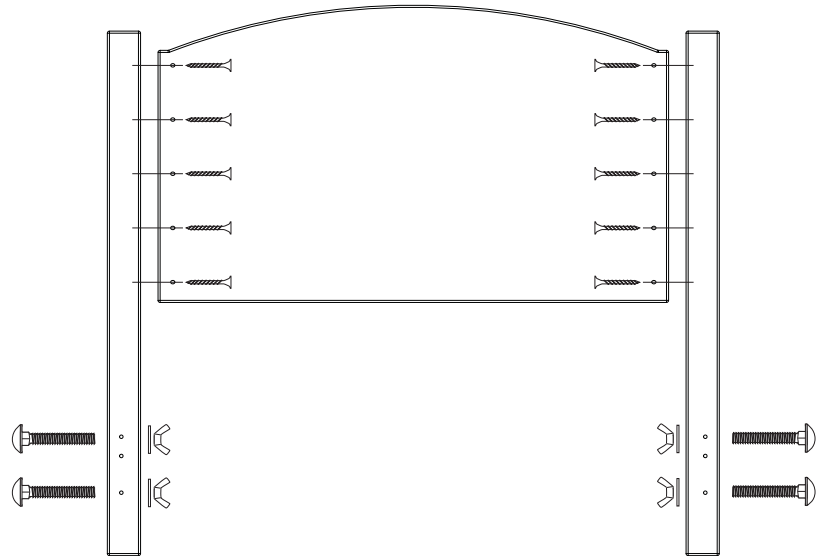

You will need a standard phillips screwdriver to complete this assembly.

1. Please inspect the parts for damage during shipping and for any missing items. If you suspect that there may be damage or a shortage, call us and we will send replacement parts if needed. At this time, visualize how the components fit together per the above drawing and make sure that you have everything identified.
2. The posts are interchangeable, so decide which post looks best from the front for the right and left positions. The headboard panel has ten screw holes in the rear.
3. Carefully insert the headboard panel into one of the posts. The panel needs to be as high as possible to minimize the gap between the top of the panel and the top of the slot. If the slot is a tight fit, lay the post on a carpeted floor, insert the panel and push down on it using your body weight until it is fully seated in the slot. Each panel is test fit in our factory before shipping but the wooden pieces may expand or contract or warp a little during shipping. If the panel is hard to fit in the slot, sanding or trimming a slight bevel on the square end of the headboard panel may be helpful.
4. When you are certain that the headboard is fully seated into and at the top of the slot, insert five of the 1-5/8" Wood Screws into the screw holes and tighten them. Do not over tighten.
5. Now repeat this same assembly for the other post.
6. Place the assembled headboard in position upright behind the mounting brackets on your twin bed frame. Most brackets will have slots for lateral and vertical adjustment that will fit two of the three holes in each post. If your frame does not fit two holes in each post, then fit one hole in each post and drill a hole to fit it. It is recommended to have two bolts in each post for best stability. Center the posts to the bed frame and attach them together with the 2" Carriage Bolts. The bolt head to the wall and the threads pointing to the bed. Now add the washer and wing nut to each bolt. Tighten them down to complete the installation. Please note that this style headboard is designed to be decorative only and the bottoms of the posts do not need to touch the floor.

All of us at Little Colorado, Inc hope that you and your little ones enjoy this Twin Headboard for many years. Please call us if you have any questions.

Manufactured in America by:

Little Colorado, Inc. 4450 Lipan Street Denver, Colorado 80211  
Phone 303-964-3212 Fax 303-964-3213 info@littlecolorado.com